USER'S GUIDE

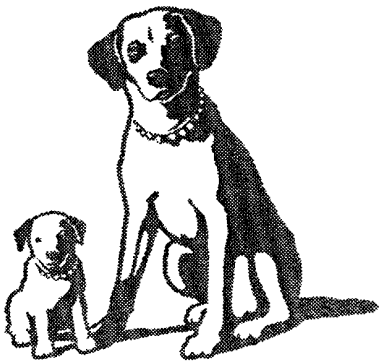

RCA

COLOR TV

Downloaded from www.Manualslib.com manuals search engine

SAFETY INFORMATION

WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

This symbol indicates important instructions accompanying the product.

WARNING
To reduce the risk of fire or shock hazard, do not expose this TV to rain or moisture.

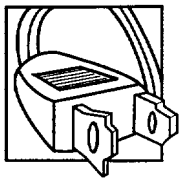

Caution: To reduce the risk of electric shock, match wide blade of plug to wide slot, fully insert.
Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqú au fond.

- Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.
- FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Cable TV Installer: This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

THOMSON CONSUMER ELECTRONICS
10330 North Meridian Street
Indianapolis, IN 46290

©1996 Thomson Consumer Electronics, Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)

Printed in U.S.A.
TOCOM 1512774A

The following materials were used in printing this publication:

50%
RECYCLED PAPER
MINIMUM 20% POST CONSUMER

PRINTED WITH SOY INK™

Downloaded from www.Manualslib.com manuals search engine

1. FIRST THINGS FIRST

STEP 1

Unpack the TV and remote control.

IMPORTANT INFORMATION: OPTIONAL STAND

Matching stands were designed to be used with 25 inch and larger table model TV(s) included in this book. The recommended stands are provided with hardware to secure the TV to the stand so that it cannot be easily pushed off, pulled off, or tipped over. Your RCA dealer can help you choose the appropriate stand for your TV.

Caution: If you choose not to use the stand recommended for your TV, take precautions that the stand or other furniture the TV is placed on is properly located and of adequate size and strength to prevent the TV from accidentally being pushed off, pulled off, or tipped over. This could cause damage to the TV and/or personal injury.

STEP 2:

Connect your TV. This is a basic connection from an antenna, cable box, or VCR to your TV. Connect the cable from your cable system or off-air antenna to the cable-in jack on the back of the TV, as shown.

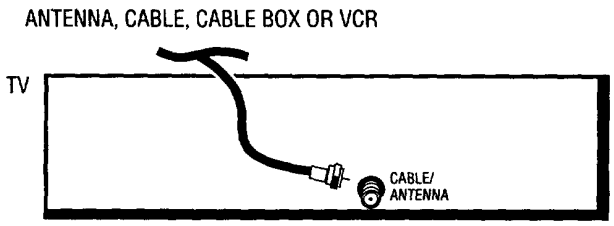

Downloaded from www.Manualslib.com manuals search engine

STEP 3:

Plug in the TV. Plug the end of the power cord into the wall outlet, matching the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.

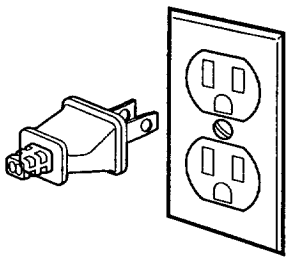

STEP 4

Put batteries in the remote.

- Remove the battery compartment cover from the back of the remote.
- Insert four AAA batteries as shown, matching the + and – ends of each battery in the compartment.
- Replace the cover.

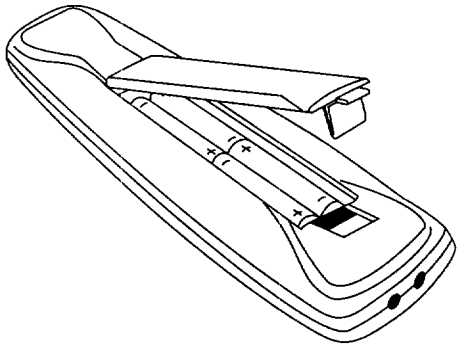

STEP 5

Turn on the TV.

- Press TV on the remote.

Read the next section, *Using the Menu System*, which is a brief overview of the basic rules for getting around in the menus using the remote or TV's front control panel.

2. USING THE MENU SYSTEM

THE MENU RULE: POINT AND SELECT

You only need to know one rule to use the on-screen menus and control panels: point and select

Downloaded from www.Manualslib.com manuals search engine

WHAT IS POINT AND SELECT?

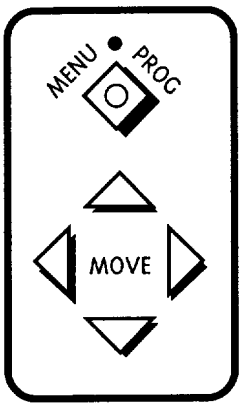

The point and select method has two steps.

1. **Point** to a menu item using the MOVE arrows on the remote.
2. **Select** a menu item by pressing MENU.

   Selecting an item tells the TV's menu system to go ahead and make the change or go to a place you have indicated. (You can also select an item by pressing the corresponding number button on the remote.)

Once you know how to point and select your way through the menus, you can apply this rule in the menu control panels, which do the real work in the menu system.

3. INTERACTIVE SETUP

The setup routine walks you through the steps needed to configure the TV. These steps allow you to select a menu language, complete the auto channel search, which puts available cable TV or antenna signals into the TV's memory, label the channels and set the parental controls. After you select a menu language, you can skip any of the remaining steps and return to them later.

BEGIN SETUP

1. Press MENU to bring up the Main menu.
2. Point to *Setup* and press MENU. The first Setup screen comes up, asking you to select a language.

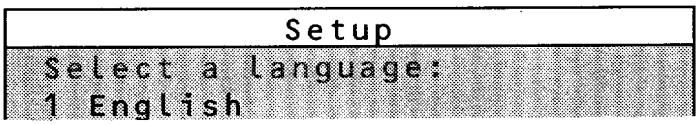

Downloaded from www.Manualslib.com manuals search engine

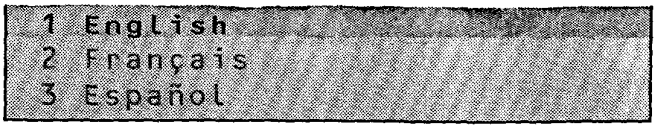

3. Point to your preferred language by pressing the up and down arrows until the language is highlighted in green.
4. Press MENU to select the language.
5. A screen appears asking if you would like the TV to search for all channels.

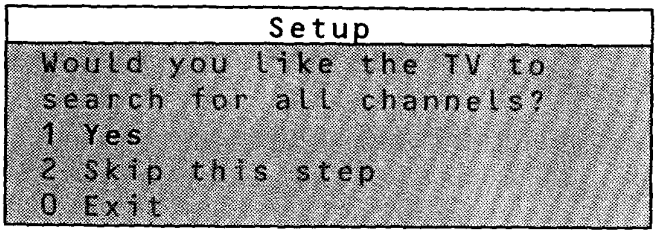

6. Complete the Setup routine or skip any of the steps and return to them later.

Downloaded from www.Manualslib.com manuals search engine

4. TOUR OF THE MENU SYSTEM

TV MAIN MENU

The Main menu is your gateway to controlling the TV. It lets you adjust the TV's audio, picture quality, screen, time functions and channel settings.

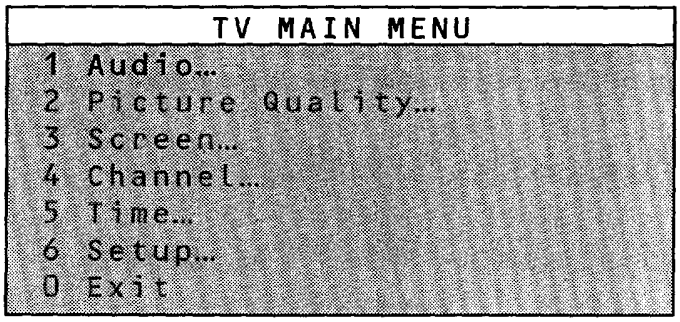

To select any other menu item:

1. Press MENU to bring up the TV's Main menu.
2. Point to any menu item by pressing the up and down arrows until the item is highlighted in green.
3. Press MENU to select the item and a new menu comes up.

To exit any menu screen, point to *Exit* and press MENU, or press CLEAR.

THE AUDIO MENU

The Audio menu lets you adjust the way the TV sounds.

Downloaded from www.Manualslib.com manuals search engine

Mute Turns off the TV's sound. Press MENU to toggle the Mute feature between ON and OFF.

THE PICTURE QUALITY MENU

The Picture Quality menu contains the controls that adjust the TV's picture.

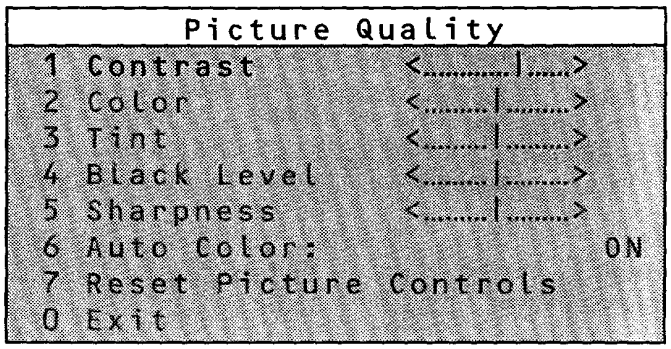

There are five slider controls for adjusting the way the picture looks. Use the left and right arrow buttons to adjust the controls.

Contrast Adjusts the difference between light and dark areas of the picture.

Color Adjusts the richness of the color.

Tint Adjusts the balance between the red and green levels.

Black Level Adjusts the brightness of the picture.

Sharpness Adjusts the crispness of edges in the picture.

Auto Color Displays the current setting (ON or OFF). This feature automatically corrects the color of the picture. Select *Off* if you prefer to adjust the picture with the Picture Controls. Use the MENU button to toggle between the choices.

Reset Picture Controls Resets the picture controls to their original settings.

THE SCREEN MENU

The Screen menu contains the controls that let you adjust the Closed-Caption mode, Closed-Caption display and menu language.

Downloaded from www.Manualslib.com manuals search engine

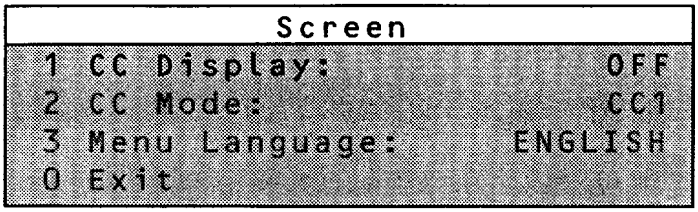

Closed-Caption Display Displays a choice list that lets you choose the way closed captioning information is shown on the screen. Use the MENU button to toggle between the choices.

Off No captioning information displayed.

On Captioning information shown always, when available.

On When Sound is Muted Displays captioning information, when available, whenever you press the MUTE button. The captioning information is not displayed when the sound is not muted.

Closed-Caption Mode Displays a choice list that lets you choose which captioning mode is used for displaying captioning information. Use the MENU button to toggle between the choices: CC1 and CC2.

Menu Language Lets you select the language of your choice: English, French or Spanish. Use the MENU button to toggle between the choices.

Downloaded from www.Manualslib.com manuals search engine

THE CHANNEL MENU

The Channel menu contains all the commands used to control your channels, including custom-building your channel list and setting parental controls.

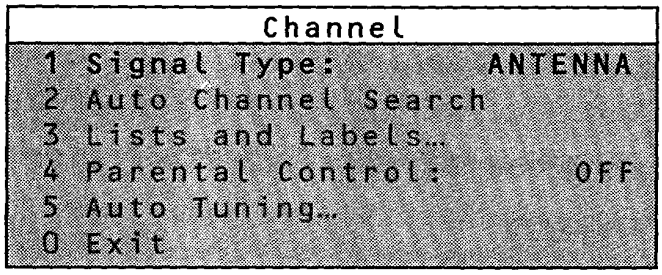

Signal Type Displays a choice list that lets you select the current antenna type.

Antenna Choose this if you are currently using an off-air antenna for UHF/VHF TV signals.

Cable TV Choose this if you are currently using cable or a cable box for TV signals.

Auto Channel Search Displays a control panel that lets you tell the TV to search automatically for all the channels available through the antenna input. When the TV finds an active channel, it places it in the channel list; inactive channels (weak stations or channels with no signal at all) will be removed from the channel list.

Lists and Labels Displays a control panel that lets you custom-build your channel scan list, choose a four-character label for each channel, and decide whether each channel is "parent-approved." Use the up, down, left and right arrows to enter settings and create labels. Press MENU to exit.

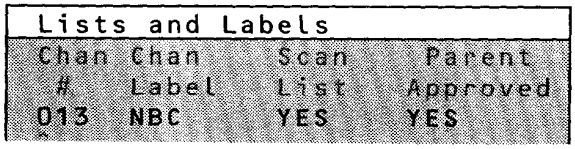

Downloaded from www.Manualslib.com manuals search engine

Chan # Use the up and down arrows to scroll up and down through the channel scan list. You can enter the channel number directly using the number buttons.

Chan Labels Use the up and down arrows to enter a four-character label for each channel.

Scan List Only the channels included in the Scan list are available when you scan up and down using the CHAN buttons. Use the up and down arrows to indicate whether the channel number indicated is included (YES) or is not included (NO) in the channel scan list.

Parent Approved Use the up and down arrows to choose whether the channel indicated should be shown when the Parental Control feature is turned on. Select YES to indicate that the channel can be shown at any time, regardless of whether Parental Control is turned on. Select NO to indicate that the front panel cannot tune to that channel when Parental Control is turned on. **Important:** You must turn the Parental Control feature ON in the Parental Control control panel.

Parental Control Displays a choice list that lets you adjust the Parental Control feature.

On The front panel CHAN buttons will tune only to channels that you have marked as "Parent Approved" in the Lists and Labels control panel. **Important:** When Parental Control is on, the TV's front panel no longer provides access to the menus. Parents may prefer to hide the remote and let children use the front panel to change channels.

Off The TV shows all channels, whether they are marked as "Parent Approved" or not.

Auto Tuning Lets you set the channel the TV will tune to when you press a device button (VCR1, VCR2 or SAT•CABLE). For example, you may want the TV to tune to channel 3 when you press the VCR1 button. Point to VCR1 on the Auto Tuning control panel. Use the MENU button to toggle through the choice list: Not Connected, CH2, CH3 or CH4. Choose CH3 from the list. Select other auto tuning channels or exit the control panel.

THE TIME MENU

Downloaded from www.Manualslib.com manuals search engine

The Time menu contains the controls that let you set the time and schedule the TV to turn off and on at specific times.

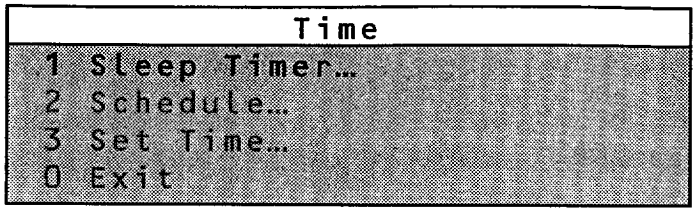

Sleep Timer Displays a control panel that lets you select the amount of time you want to give the TV before it shuts itself off. Use the up and down arrows to increase or decrease the sleep timer by 15 minute increments. Press MENU to exit.

Schedule Displays a control panel that lets you set up a schedule for turning the TV on and off automatically. **Make sure to turn the schedule On in the control panel.** Use the up and down arrows and number buttons to change the settings. Use the left and right arrows to move across the control panel. You must first set the clock to use the scheduling feature.

Set Time Displays a control panel that lets you enter the current time. Use the up and down arrows and number buttons to set the time. Press MENU to exit

Downloaded from www.Manualslib.com manuals search engine

CHANNEL MARKER

There are several indicators that come up when you change channels or press the DISPLAY button. This display is called the Channel Marker. The Channel Marker shown below is just an example of what your screen may look like.

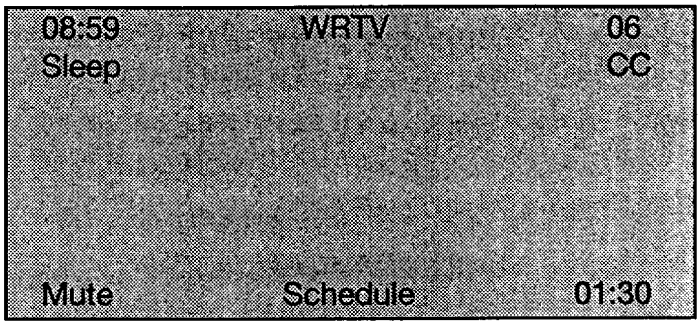

08:59 Displays the current time.

WRTV Displays the label assigned to the current channel.

06 Displays the current channel.

Sleep Displayed when the Sleep Timer has been set.

CC Displayed when Closed Captioning is available on the current channel.

Mute Displayed when you mute the audio.

Schedule Displayed when the TV is scheduled to turn on.

01:30 Displayed to count down time left on the commercial skip (SKIP) timer.

TOUR OF THE REMOTE

Downloaded from www.Manualslib.com manuals search engine

POWER When in TV mode, turns off the TV. In VCR mode, and if programmed, turns on and off most VCRs.

VCR1 If programmed, turns on VCR and puts the remote in VCR mode. Also turns on the TV.

SAT•CABLE If programmed, turns on most satellite receivers or cable boxes. Puts the remote in SAT•CABLE mode. Also turns on the TV.

VCR2•LD If programmed, turns on second VCR or laserdisc player. Puts the remote in VCR2•LD mode. Also turns on the TV.

TV Turns on the TV and puts the remote in TV mode. Also displays channel information.

AUDIO If programmed, turns on RCA audio component and puts the remote in audio mode.

REW, PLAY, FF, REC, STOP, PAUSE If programmed, provide transport control for some remote-controllable VCRs, laserdisc players, tape decks, and CD players.

VOL < or VOL > Decreases or increases the TV's volume.

CHAN ^ or CHAN v Scans up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels.

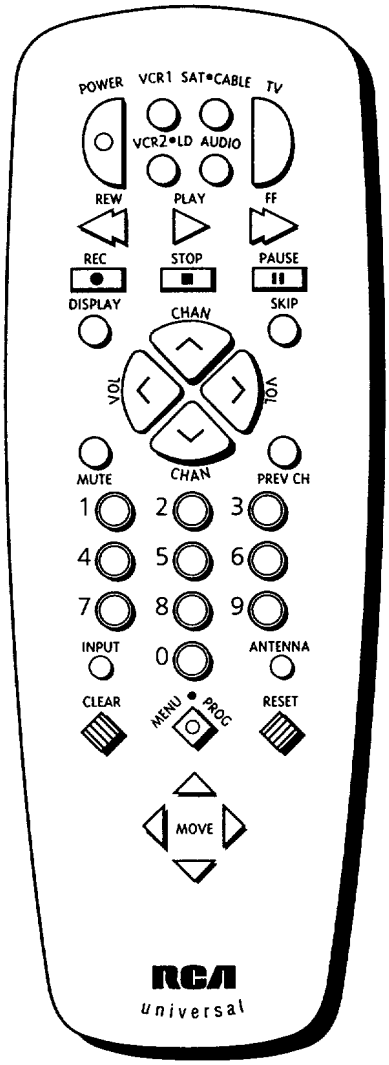

DISPLAY Press **once** to bring up channel information.

Press DISPLAY **twice** to bring up the program title, the program's length, elapsed time and other program details such as the story line and whether Closed-Captioning is available. Press DISPLAY again to clear the screen.

Whether all (or any) of the program details are displayed depends on whether

Downloaded from www.Manualslib.com manuals search engine

the program provider has sent the information along with the program.

SKIP Press once before changing channels and the TV will wait 30 seconds before returning you to the original channel. Press repeatedly to add more time. Press CLEAR to cancel the SKIP timer and remain on the current channel.

MUTE Turns off the TV's sound. Press again to restore the sound.

PREV CH Returns you to the previous channel.

(0-9) Number Buttons Enters channel numbers and time settings directly though the remote control. To enter a two-digit channel, press the two digits. To enter a three-digit channel, press and hold the first digit, then add the second two. Example: to tune to channel 123, press and hold 1, press 2, then press 3.

INPUT Press to toggle through the available input sources (CH3, CH4, etc.).

ANTENNA Functions as TV•VCR button in VCR mode and TV•SAT button in SAT•CABLE mode.

CLEAR Removes any menu or display from the screen and returns you to TV viewing. Also cancels the SKIP timer.

MENU•PROG Brings up the Main menu. When in the menu system, selects highlighted items or returns you to the previous menu. When in VCR mode, it functions as a Program button.

RESET Returns all picture quality controls to their original settings.

MOVE (Arrows) Used to point to different items in the menu system. Also used to adjust the menu controls.

Downloaded from www.Manualslib.com manuals search engine

PROGRAMMING THE REMOTE

PROGRAMMING THE REMOTE TO CONTROL OTHER COMPONENTS

The universal remote can be programmed to control most brands of remote controllable VCRs, and cable boxes. If you own an RCA, GE, or ProScan VCR, you probably don't need to program it at all. Other manufacturers' brands need to be programmed.

To determine whether the universal remote needs to be programmed, turn on the component (VCR, cable box, satellite receiver, or laserdisc player), point the remote at the component, and press the appropriate button (VCR1, VCR2, SAT•CABLE, or AUDIO). Then press POWER or CHAN UP or DOWN to see if the component responds to the remote commands. If not, the remote needs to be programmed.

Follow these steps to program your universal remote to control your component:

1. Turn on the component to be programmed.
2. Find the appropriate brand and code number(s) on the code list shown below.
3. Press and hold the component button on the remote.
4. Enter the two-digit code from the code list.
5. Release component button then press POWER to see if the component responds to the remote commands. If it doesn't, try pressing the component button and POWER to see if the component responds.

Once the remote has been programmed with the correct codes, you are ready to use it to control your devices. To operate the device:

1. Press the device button (TV, VCR1, VCR2•LD, SAT•CABLE, or AUDIO) to set the remote to control the device.
2. Press OFF/ON to turn the device off or on.

Downloaded from www.Manualslib.com manuals search engine

3. Use the remote buttons that apply to that device.

This remote may not operate all models of the brands that are shown. Use the codes shown or on the sheet packed with your remote.

VCR CODES

Aiwa 15	Kenwood 02,14,16,30	Sansui 16
Akai 03,22,23	Lloyd's 15	Sanyo 02,12
Audio Dynamics 14,16	Magnavox 08,29	Scott 04,13,41
Broksonic 10	Marantz 02,08,14,16,29,30	Sears02,05,09,12,18,19,35,43
Canon 08	Marta 09	Sharp 06,24,39
Capehart 01	MEI 08	Shintom 17,26,31
Citizen 09	Memorex 08,09,12,15	Sony 17,26,38
Craig 07,12	MGA 04,27	Sylvania 08,15,29
Curtis Mathes 00,08,15	Minolta 05,35	Symphonic 02,15
Daewoo 13	Mitsubishi 04,05,27,35,40	Tashiko 09
dbx 14,16	Montgomery Ward 06	Tatung 30
Dimensia 00	MTC 07,15	Teac 15,30
Dynatech 15	Multitech 07,15,31,32	Technics 08
Emerson ..... 09,10,13,15, ... 20,23,24,34,41	NEC 02,14,16,30	Teknika 08,09,15,21
	Panasonic 08	Toshiba 05,13,19
Fisher 02,12,18,19,43	Pentax 05,35	Totevision 07,09
Funai 15	Philco 08,29	Unitech 07
GE 00,07,08,32,37	Philips 08,29	Vector Research 14,16
Goldstar 09,14	Pioneer 05,16,33	Victor 16
Harman Kardon 14	ProScan 00	Video Concepts 14,16
Hitachi 05,15,35,36	Quartz 02	Videosonic 07
Instant Replay 08	Quasar 08	Wards ..... 05,06,07,08,12, ... 13,15,25,31,35
JCL 08	RCA 00,05,07,08,28,35,37	
JCPenney ..... 02,05,07,08, ... 14,16,30,35	Realistic ..... 02,06,08,09,12, ... 15,19,43	Yamaha 02,14,16,30
		Zenith 11,17
JVC 02,14,16,30	Samsung 07,13,22,32,42	

SATELLITE / CABLE BOX CODES

ABC 22,46	Pioneer 18,20,44
Anvision 07,08	Randtek 07,08
Cablestar 07,08	RCA 00,27
Eagle 08	Regal 12,13
Eastern International 02	Regency 02,33
General Instrument ... 04,05, ... 15,23,24,25,30,36,46	Samsung 44
	Scientific Atlanta 03,22,35
Hamlin 12,13,34,48	Signature 46
Hitachi 37,43,46	Sprucer 27

AUDIO CODES

RCA/ Dimensia

AM/FM Receiver 03	
CD 07	
Tape 06	
Phono 05	
Aux 04	

Downloaded from www.Manualslib.com manuals search engine

Jerrold	04,05,19,23, 24,25,30,36,45,46,47
Macom	37,43
Magnavox	07,08,19,21, 26,28,29,32,33,40,41
NSC	09
Oak	01,16,38
Oak Sigma	16
Panasonic	03,27,39
Philips	07,08,19,21,26,28, 29,32,33,40,41
Starcom	46
Sylvania	11
Teknika	06
Texscan	10,11
Tocom	17,21,49,50
Unika	31,32,41
Viewstar	07,08,19,21,26, 28,29,32,33,40,41
Warner Amex	44
Zenith	14,42

LASERDISC CODES

Pioneer	33,37
ProScan	33,37
RCA	33,37

2. Press OFF/ON to turn the device off or on.

Downloaded from www.Manualslib.com manuals search engine

TROUBLESHOOTING

If you experience any difficulty with your TV, check a few basic remedies before calling your service technician.

TV WILL NOT TURN ON OR CONTROLS DON'T WORK

- Check to make sure it is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else.
- Try unplugging set for two minutes and then plug it back in and turn it on again.

PROBLEMS WITH REMOTE

- Maybe something is between the remote and the remote sensor.
- Maybe the remote is not aimed directly at the TV's remote sensor.
- Maybe remote batteries are weak, dead or installed incorrectly. Try replacing batteries correctly.
- Remove batteries and hold down one or more buttons for several seconds. Install the batteries and try remote.

TURNS ON OR OFF WHILE PLAYING

- Schedule function may have been activated.
- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high.

SCHEDULE DOES NOT TURN OFF THE TV AT THE SET TIME

- Check schedule on/off function (it must be set to On).

Downloaded from www.Manualslib.com manuals search engine

- Check to make sure clock is set to the correct time.

BLANK SCREEN OR BLACK BOX APPEARS ON THE SCREEN

- Try another channel.
- Press RESET, in case the picture controls are set too low.
- Captioning may be turned on. Check the Closed-Caption Display control panel in the Channel menu.

NO SOUND, PICTURE OKAY

- Maybe sound is muted. Try pressing volume up button to restore sound.

NO PICTURE, NO SOUND BUT POWER LIGHT IS ON

- Maybe cable/air function is in wrong position.
- Maybe a vacant channel is tuned.
- If watching VCR, make sure TV is tuned to channel 3 or 4 – same as CH3/4 switch on VCR. Also check to make sure TV/VCR switch on VCR is in correct position.

SOUND OKAY, PICTURE POOR

- Check antenna connections.
- Try adjusting sharpness function to improve weak signals.

CREATING A GREENER FUTURE

At **Thomson Consumer Electronics** we are dedicated to the preservation of our natural heritage and to a healthy and safe way of life for current and future generations. This is a global effort which encompasses every THOMSON facility throughout the world.

We believe that clean air, clean water, a protected earth, and healthy people are not only practical and desirable goals, but achievable ones as well. Our Corporate Environmental, Health and Safety Charter acknowledges our commitment to protect these precious assets and provides a challenging vision and guideline for conducting our business. Below are a few examples of Thomson's achievements in our efforts to preserve our natural

Downloaded from www.Manualslib.com manuals search engine

The Earth	The Air	The Water
Thomson reclaims millions of pounds of hazardous waste annually diverting it from landfills.	Thomson has replaced solvent based paints at many locations resulting in an 80% reduction in toxic air emissions for equivalent material used.	Thomson recovers over 2 million pounds of fine glass particles from process water each year and recycles them back into its glass furnaces.
Thomson treats millions of pounds of waste water sludge annually and renders it nonhazardous.	Thomson has eliminated the use of ozone depleting substances at television manufacturing facilities around the world.	Thomson's state-of-the-art waste water treatment plants filter out over 26 million pounds of solids from process water each year.
Thomson recycles over 50 million pounds of nonhazardous material annually that otherwise would have been treated as trash, an overall recovery rate of 50%.	Thomson is collecting and returning over 1.5 million pounds of air pollution control dust to the glass making process annually.	Thomson's US glass factory recycles 2,500 gallons of water per minute and cleans 2.6 million gallons of water per day.
Thomson globally recycles millions of pounds of broken picture tube glass through both internal and external processes annually.	Thomson has launched worldwide energy savings programs which contribute to global efforts to reduce air emissions from electrical generating facilities.	Thomson is researching new processes and is developing new manufacturing equipment and technologies to further reduce large volume water use.

Thomson has also increased its usage of recycled materials for packaging of our products. For example, in the U.S. and Mexico our television plants use recycled content in our television cartons and instruction booklets. The inks used for the print on cartons and instruction booklets are soy based. For a free brochure regarding Thomson's Environmental Health and Safety Programs, write to Thomson Consumer Electronics 10330 N. Meridian, Indianapolis, IN 46290, attention Environmental Programs: INH340.

Downloaded from www.Manualslib.com manuals search engine

TOUR OF THE TV

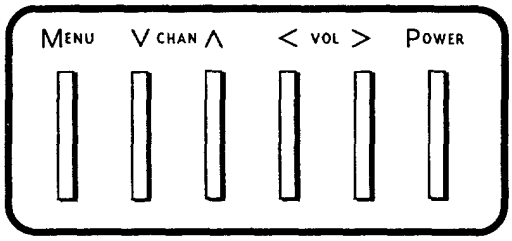

VOL < Decreases the volume. When in the menu system, VOL < is used to point left to items and adjust menu controls.

VOL > Increases the volume. When in the menu system, VOL > is used to point right to items and adjust menu controls.

CHAN ^ Scans up through the channel list. In the menu system, it points up to items and adjusts menu controls.

CHAN v Scans down through the current channel list. In the menu system, it points down to items and adjusts menu controls.

MENU Brings up the Main menu. When in the menu system, it selects highlighted items. Also returns you to the previous menu.

If you turn Parental Control on, the front panel no longer provides access to the menus. For more information, see *Parental Control* in the Channel menu on the back side of these instructions.

POWER Turns the TV on and off.

The front panel shown is a typical button layout. The exact look of the buttons may be different from those on the front of your TV.

CARE AND CLEANING

You can clean the TV as required, using a soft cloth or the dusting attachment for your vacuum cleaner. Be sure to occasionally vacuum the ventilation slots in the cabinet to help assure adequate ventilation.

Downloaded from www.Manualslib.com manuals search engine

To clean the TV screen, use a diluted soap and water mixture and a soft cloth. Do not use furniture polish on the TV cabinet or screen.

While cleaning do not allow liquid to run down the screen and inside the TV. Also, avoid placing drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.

Caution: If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the screen. Such images include network logos, phone numbers, and video games. Extended viewing of channels displaying these images should be avoided.

LIMITED WARRANTY

WHAT YOUR WARRANTY COVERS:

- Any defect in materials or workmanship.

FOR HOW LONG AFTER YOUR PURCHASE:

- 90 days for labor charges.
- One year for parts.
- Two years for picture tube.

(The warranty period for rental units begins with the first rental.)

WHAT WE WILL DO:

- Pay any Authorized RCA Television Servicenter the labor charges to repair your television.
- Pay any Authorized RCA Television Servicenter for the new or, at our option, refurbished replacement parts and picture tube required to repair your television.

HOW YOU GET SERVICE:

- For screen sizes of 20" and smaller: Take your RCA television to any Authorized RCA Television Servicenter

Downloaded from www.Manualslib.com manuals search engine

- For screen sizes larger than 20": Request home service from any Authorized RCA Television Servicenter.
- To identify your nearest Authorized RCA Television Servicenter, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the service technician your evidence of purchase date or first rental.

WHAT YOUR WARRANTY DOES NOT COVER:

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your television.
- Damage from misuse or neglect.
- Batteries.
- Images burnt onto the screen.
- A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A television purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

PRODUCT REGISTRATION:

- Please complete and mail the Product Registration Card packed with your television. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

HOW STATE LAW RELATES TO THIS WARRANTY:

- This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

IF YOU PURCHASED YOUR PRODUCT OUTSIDE THE USA:

- This warranty does not apply. Contact your dealer for warranty information.

Downloaded from www.Manualslib.com manuals search engine